

INSTALLATION INSTRUCTIONS




SAPPHIRE LEDLITE




Installation:

1. First, cut out the power supply, make sure they are safe for the electricians.
2. Open the hole size according to the lamp cut-out size.
3. Connect the power supply to the AC wires.
4. Put the lamp to the hole.

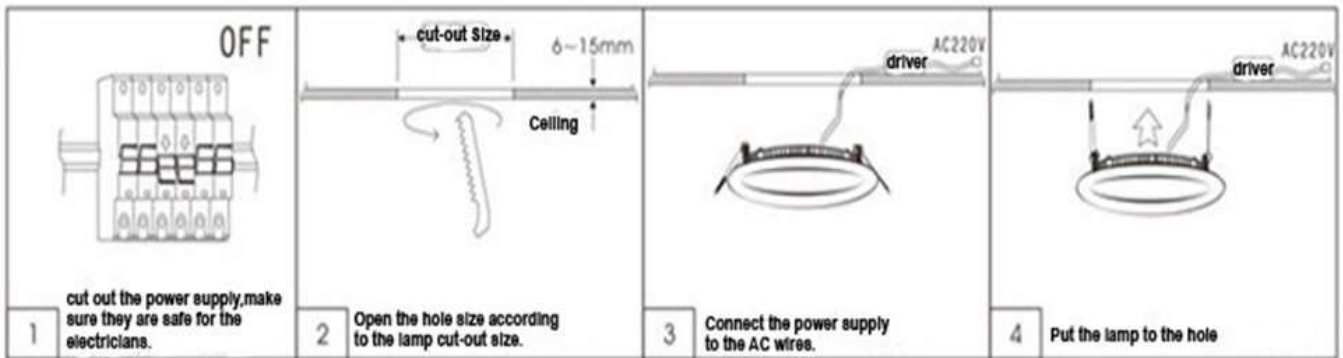

Schematic diagram:

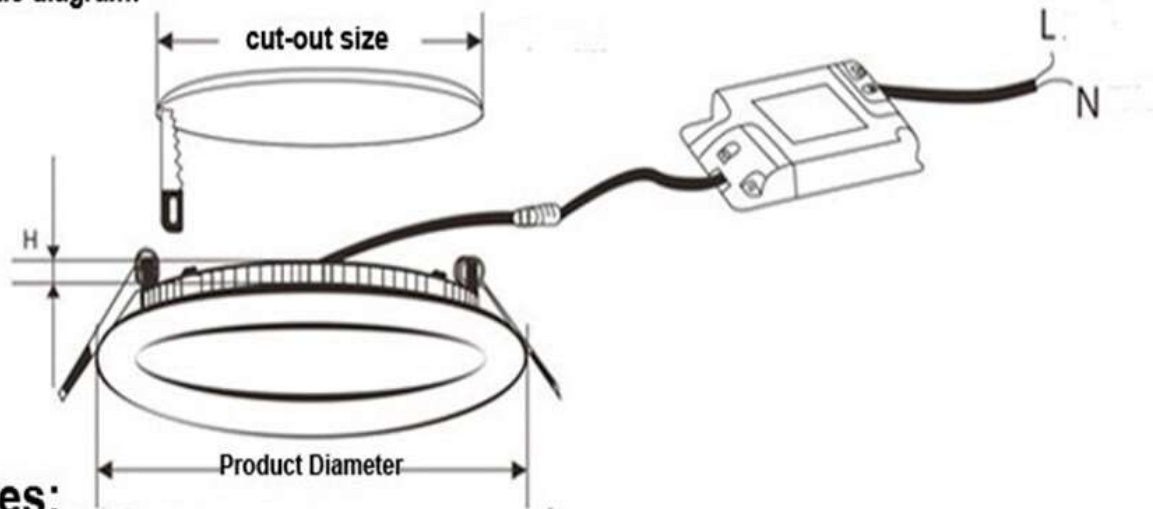

Notes:

- .Please using the specified drivers(voltage and electric current).
- .Suitable for dimmer switch.
- .When install and replace the lamps,must cut out the power supply,to make sure safe.
- .Do not use outdoor or any occasion can be Rain.

MODEL CODE	WATTAGE	LAMP LUMEN OUTPUT	CUT-OUT SIZE
SAPPHIRE LEDLITE	20W	2010 lm	ø 175 mm ø 210 mm
	30W	3015 lm	



morganhope
INDUSTRIES LTD



Telephone: +44 (0)1704 512000
Email: info@morganhope.com www.morganhope.com